# PT4500-SDI-TK-V2



# High Bright 15" SDI Tally Teleprompter w/ Travel Case



#### What's Included

- ☐ 1x Teleprompter Base
- ☐ 1x Hood Frame
- ☐ 1x Silicone Hood w/ Canvas Shroud
- ☐ 1x Counterweight
- ☐ 1x Tall Riser
- ☐ 1x Medium Riser
- ☐ 1x DSLR Riser
- ☐ 2x L-Shaped Hex Keys
- ☐ 2x 1/4-20 Camera Screws
- ☐ 1x 15 in. SDI 4:3 Monitor
- ☐ 1x Power Adapter
- ☐ 1x 70/30 15 in. Glass
- ☐ 1x Digital Copy of Prompter Pro4
- ☐ 1x Hard Travel Case










## **Teleprompter Assembly Setup**


## Step 1

Place the teleprompter glass frame on a flat surface and remove the four screws as shown.

## Step 2

Align and attach the teleprompter hood with the 8 screw pegs from the teleprompter frame.

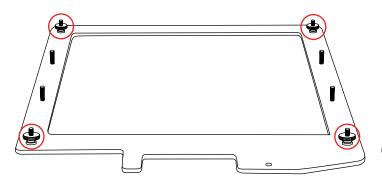

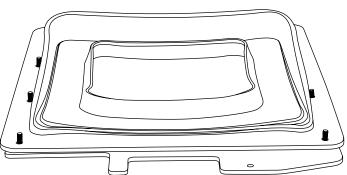



#### Step 3

The metal frame is directional. Make sure the thicker side is on top and the slimmer side is on the bottom.

### Step 4

Put the washers on before tightening the screws. The washers and 4 additional screws are inside a bag on the bottom foam.

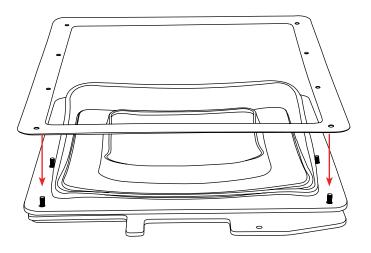

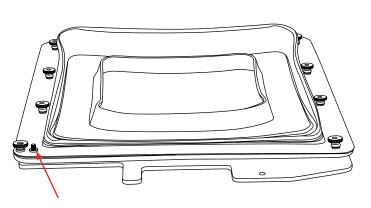











Step 5

Extend the teleprompter hood open and attach teleprompter boot using the clips. It is suggested to align the seam with the bottom of the teleprompter hood.

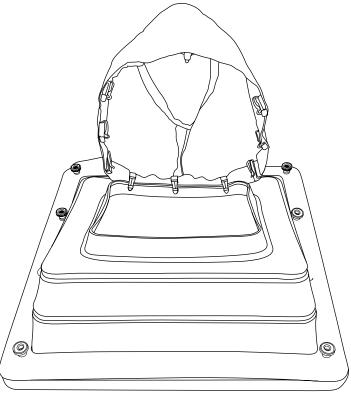

Step 6 Remove the monitor mounts from the teleprompter base using the included larger 4mm hex key to loosen from the 15mm rods.

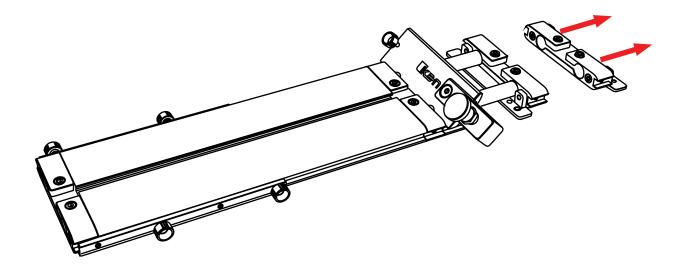









### Step 7

Attach the monitor mounts on the back of the monitor's VESA compatible threads using the 4 included screws and provided 2mm hex key.

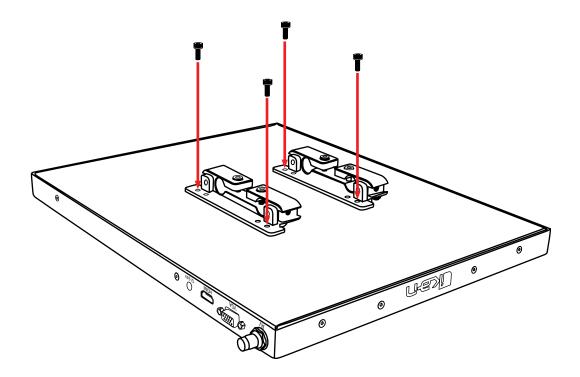

### Step 8

After the monitor mounts are attached, adjust the 15mm rods to accommodate the monitor. Leave about 1 inch of room for the teleprompter bracket. Make sure the 15mm rods go through both set of monitor mounts. Please ensure that all screws are properly tightened after inserting the monitor. \*SAFETY NOTE\* Make sure to leave at least 2 inches of the rods inside the teleprompter base.

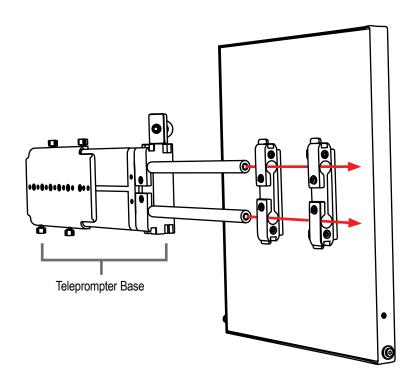










### Step 9

While sliding the teleprompter bracket into the slot of the teleprompter base pull on the red knob to allow the bracket to fully slide in.

### Step 10

Once the bracket is in place, tighten the side screw to lock in place. Double check and make sure all the screws are tightened with the included hex keys.

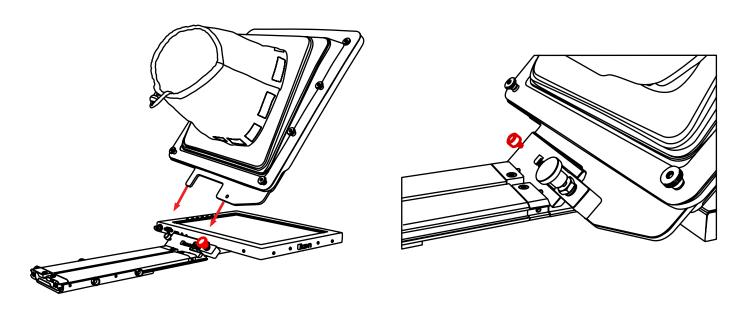

### Step 11 (optional)

Should the teleprompter be too front heavy, you can attach the included counter weight on the back of the teleprompter base.

#### **Foam Case**

To make your teleprompter more portable, we packed it in a reusable, high-quality SKB rolling hard case.











#### **Monitor Ports**

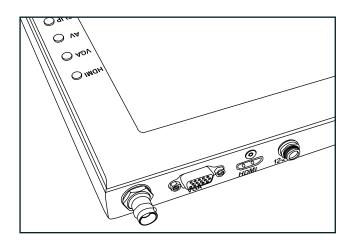

BNC – SDI Input VGA – Video Graphics Array DE15 Connection HDMI – High-Definition Multimedia Interface Input Connection Power Port – 12-24v Input

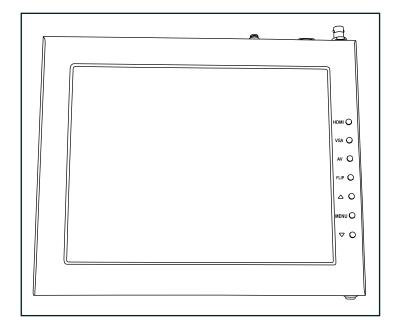

HDMI – Switch HDMI input
VGA – Switch to VGAinput
SDI – Switch to composite SDI input
Flip – Toggle image flip
(Can be set to horizontal, vertical, or both via menu)
Up Arrow – Toggle up to adjust setting
Menu – Access to monitor settings
Down Arrow – Toggle down to adjust setting

### **Monitor Menu Settings**

Video Config

Contrast (White Level)

Brightness (Black Level)

Tint (Chroma Hue)

Chroma (Chroma Saturation)

Sharpness (Detail)

RGBSetup - Manually configure RGB

Return

System Config

Menu Duration – Set duration of how long menu stays on screen

Video Ratio – Set screen aspect ratio 16:9 or 4:3 (4:3 is native resolution, 16:9 will create black bars)

Flip-H – Assign toggle button to flip image horizontally

Flip-V – Assign toggle button to flip image vertically

Reset - Factory reset

Return

PC Setup (Only available for VGA)

H-Position – Adjust horizontal position

V-Position – Adjust vertical position

Auto – Monitor automatically adjust position

Return

Exit

### How to set-up FLIP button feature:

- 1. Press MENU button
- 2. Navigate to SYSTEM CONFIG.
- 3. Navigate to FLIP-V or FLIP-H
- 4. Change FLIP-V and/or FLIP-H to "ON"
- 5. Exit MENU
- The FLIP button should now be activated and can be pressed to mirror the image Horizontally or Vertically
- 7. When FLIP-H is ON, the image will flip Horizontally
- 8. When FLIP-Vis ON, the image will flip Vertically
- 9. If both are ON, the FLIP button will toggle both Horizontal and Vertical flip









## Watch our VIDEO TUTORIAL on how to assemble Ikan Professional Teleprompters:

ikancorp.com/15-in-videos/



## **Optional Accessories**

PT4500-G Replacement Glass for both PT4500-SDI-V2

M15W 15" High Bright Widescreen Talent Monitor (for PT4500-SDI-V2)

PT15-SDI-V2 15" High Bright 4:3 Monitor (for PT4500-SDI-V2)
PT-CASE-V2 Rolling Hard Case for PT4500-SDI-V2 Teleprompter

PT-CASE-15TM Hard Case for 15" Talent Monitor









#### **Supported Video Signals**

#### SDI & HDMI:

1080p @ 50, 25, 59.94, 60, 23.976, 24, 29.97, 30 Hz 1080i @ 50, 59.94, 60 Hz 720p @ 50, 59.94, 60 Hz 480p @ 59.94 Hz 576p @ 50, 59.94 Hz 576i @ 50 Hz 1920x1200 @ 60 Hz 1600 x 1200 @ 60 Hz 1400x1050 @ 60 Hz 1280x1024 @60 Hz 1280x960 @ 60 Hz 1360x768 @ 60 Hz 1280x768 @ 60 Hz 1024x768 @60 Hz 800x600 @ 60 Hz 640x480 @ 60 Hz

#### **Learn More**

More dynamic information at official website: www.ikancorp.com

## Support

Contact email: support@ikancorp.com

#### **CONDITIONS OF WARRANTY SERVICE**

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations: (\*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.

©2024 Ikan International.All rights reserved.










## **Pinout Diagram for Tally Light**

#### **Tally Light Pinout:**

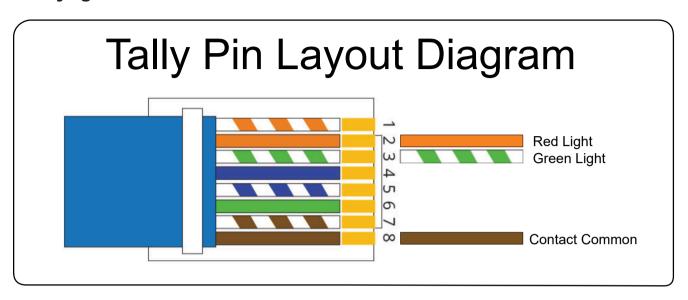

### **Learn More**

More dynamic information at official website :www.ikancorp.com

## **Support**

Contact email: support@ikancorp.com



©2024 Ikan International.All rights reserved.





