

PT4500S-TMW-TK



High Bright 15" SDI Tally Teleprompter w/ 15" Widescreen SDI Talent Monitor & Travel Cases



What's Included


- ☐ 1x Teleprompter Base
- ☐ 1x Hood Frame
- ☐ 1x Silicone Hood w/ Canvas Shroud
- ☐ 1x Counterweight
- ☐ 1x Tall Riser
- ☐ 1x Medium Riser
- ☐ 1x DSLR Riser
- ☐ 2x L-Shaped Hex Keys
- ☐ 2x 1/4-20 Camera Screws
- ☐ 1x 15 in. SDI 4:3 Monitor
- ☐ 1x 15 in. SDI 16:9 Widescreen Monitor
- ☐ 1x Power Adapter
- ☐ 1x 70/30 15 in. Glass
- ☐ 1x Digital Copy of Prompter Pro4
- ☐ 1x Hard Travel Case
- ☐ 1x Hard Travel Case for Talent Monitor



Teleprompter Assembly Setup


Step 1

Place the teleprompter glass frame on a flat surface and remove the four screws as shown.

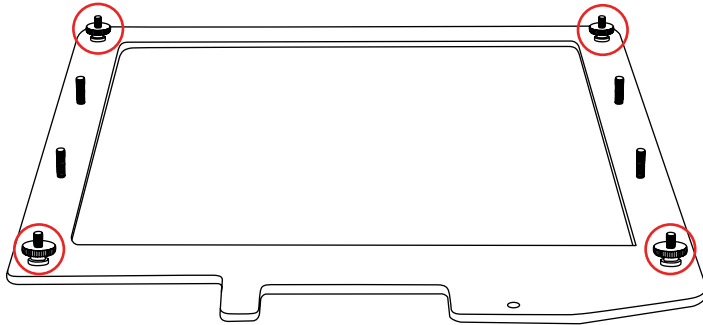


Step 2

Align and attach the teleprompter hood with the 8 screw pegs from the teleprompter frame.

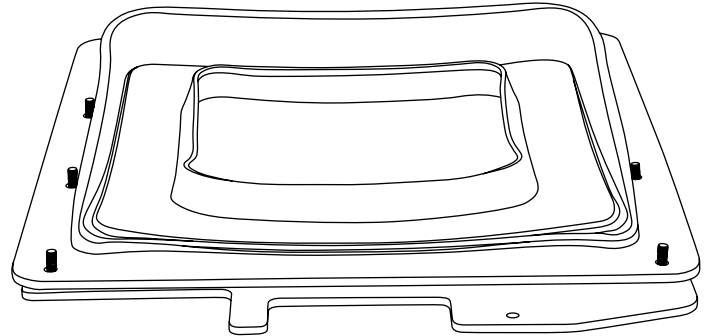


Step 3

The metal frame is directional. Make sure the thicker side is on top and the slimmer side is on the bottom.

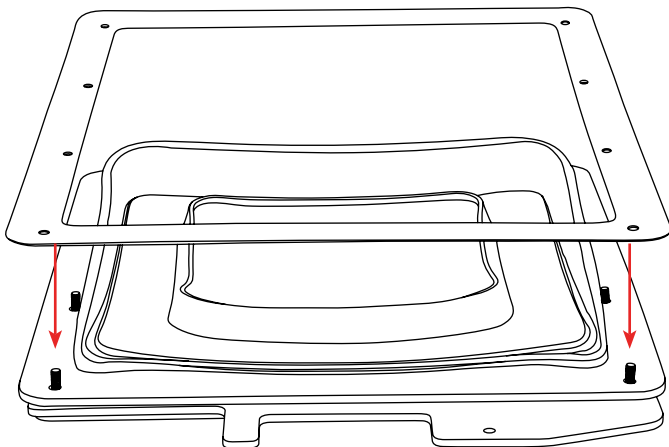


Step 4

Put the washers on before tightening the screws. The washers and 4 additional screws are inside a bag on the bottom foam.

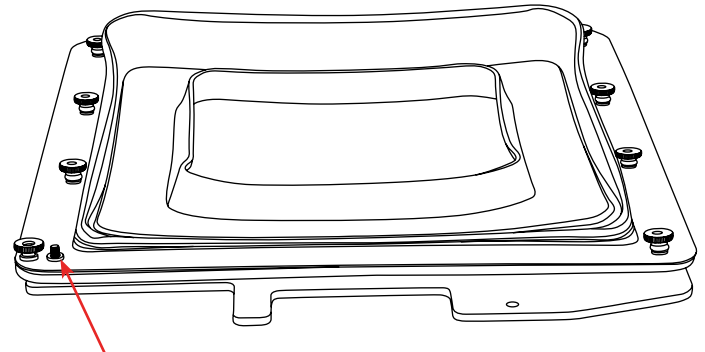


Step 5

Extend the teleprompter hood open and attach teleprompter boot using the clips. It is suggested to align the seam with the bottom of the teleprompter hood.

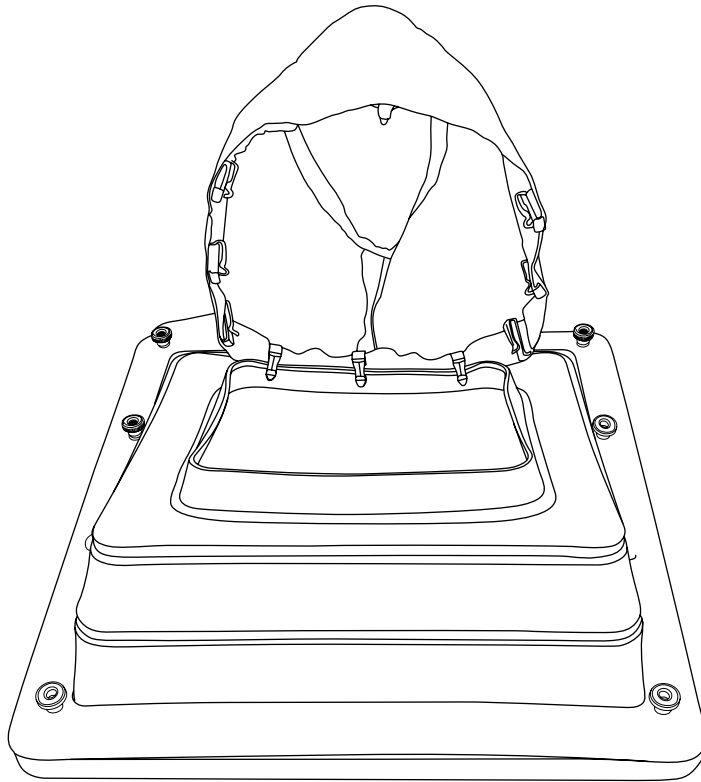


Step 6

Remove the monitor mounts from the teleprompter base using the included larger 4mm hex key to loosen from the 15mm rods.

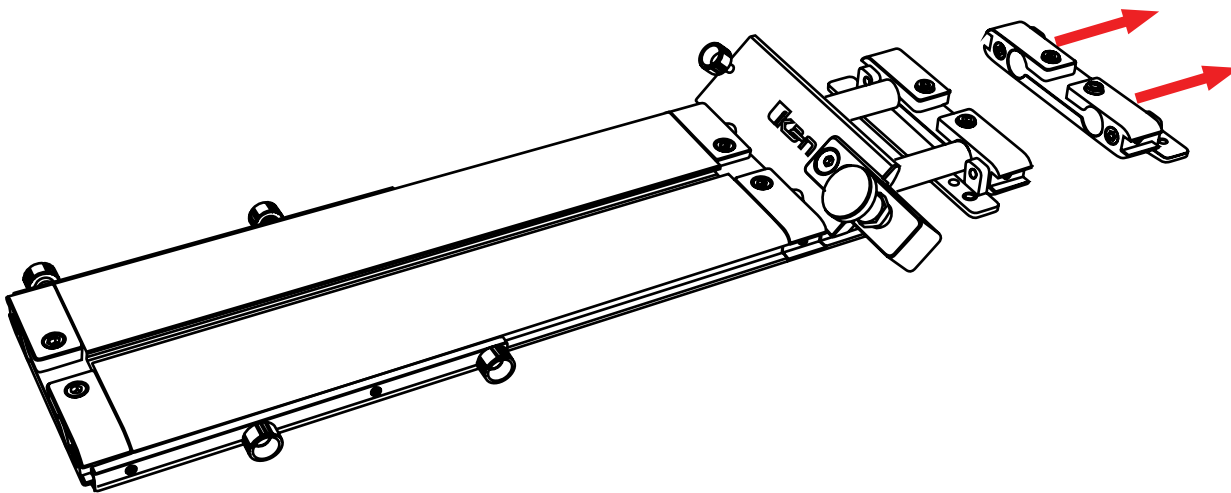

Step 7


Attach the monitor mounts on the back of the monitor's VESA compatible threads using the 4 included screws and provided 2mm hex key.

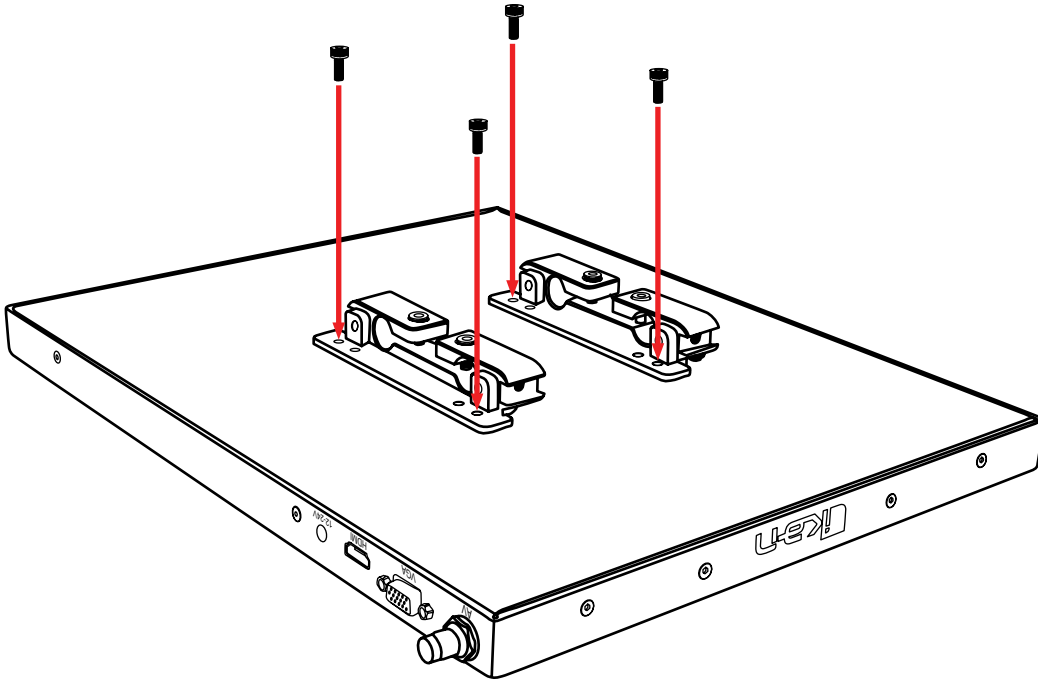

Step 8


After the monitor mounts are attached, adjust the 15mm rods to accommodate the monitor. Leave about 1 inch of room for the teleprompter bracket. Make sure the 15mm rods go through both set of monitor mounts. Please ensure that all screws are properly tightened after inserting the monitor.

SAFETY NOTE Make sure to leave at least 2 inches of the rods inside the teleprompter base.

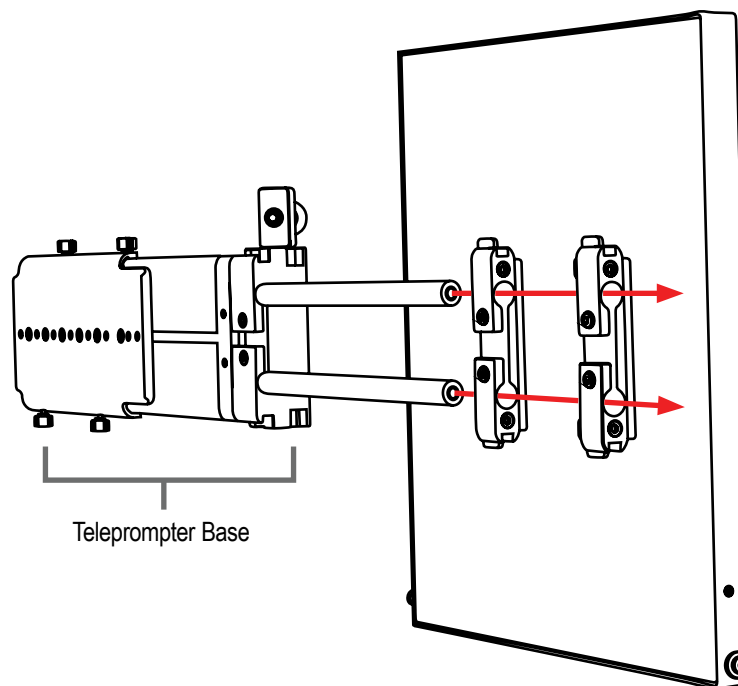


Step 9

While sliding the teleprompter bracket into the slot of the teleprompter base pull on the red knob to allow the bracket to fully slide in.

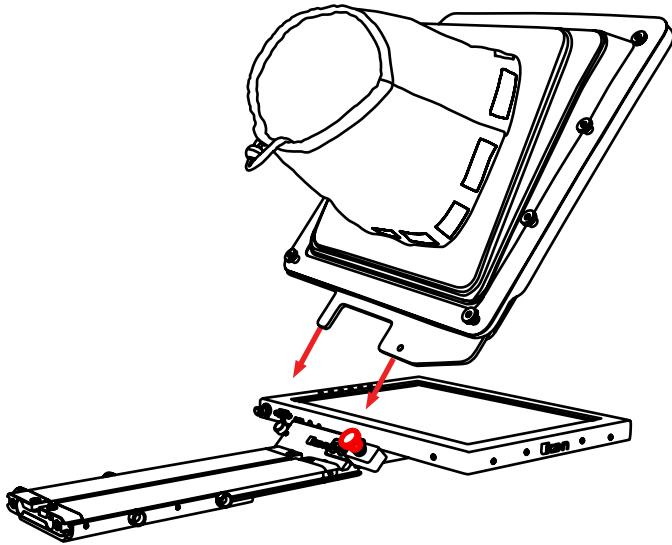

Step 10

Once the bracket is in place, tighten the side screw to lock in place. Double check and make sure all the screws are tightened with the included hex keys.

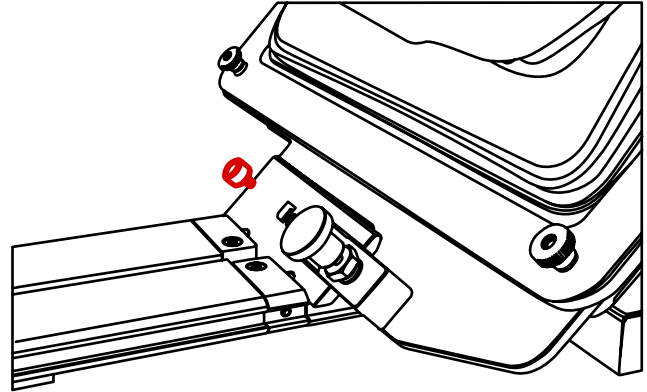

Step 11 (optional)


Should the teleprompter be too front heavy, you can attach the included counter weight on the back of the teleprompter base.

Foam Case

To make your teleprompter more portable, we packed it in a reusable, high-quality SKB rolling hard case.



Monitor Ports

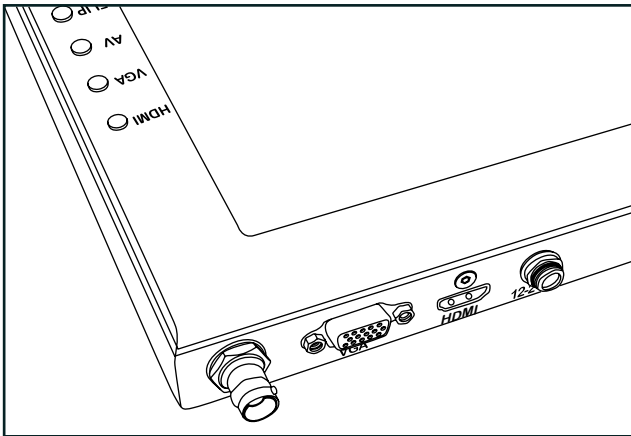

BNC – SDI Input
VGA – Video Graphics Array DE15 Connection
HDMI – High-Definition Multimedia Interface Input Connection
Power Port – 12-24v Input

Monitor Menu Settings

Video Config

- Contrast (White Level)
- Brightness (Black Level)
- Tint (Chroma Hue)
- Chroma (Chroma Saturation)
- Sharpness (Detail)
- RGB Setup – Manually configure RGB
- Return

System Config

- Menu Duration – Set duration of how long menu stays on screen
- Video Ratio – Set screen aspect ratio 16:9 or 4:3 (4:3 is native resolution, 16:9 will create black bars)
- Flip-H – Assign toggle button to flip image horizontally
- Flip-V – Assign toggle button to flip image vertically
- Reset – Factory reset
- Return


PC Setup (Only available for VGA)

- H-Position – Adjust horizontal position
- V-Position – Adjust vertical position
- Auto – Monitor automatically adjust position
- Return

Exit

How to set-up FLIP button feature:

1. Press MENU button
2. Navigate to SYSTEM CONFIG.
3. Navigate to FLIP-V or FLIP-H
4. Change FLIP-V and/or FLIP-H to "ON"
5. Exit MENU
6. The FLIP button should now be activated and can be pressed to mirror the image Horizontally or Vertically
7. When FLIP-H is ON, the image will flip Horizontally
8. When FLIP-V is ON, the image will flip Vertically
9. If both are ON, the FLIP button will toggle both Horizontal and Vertical flip

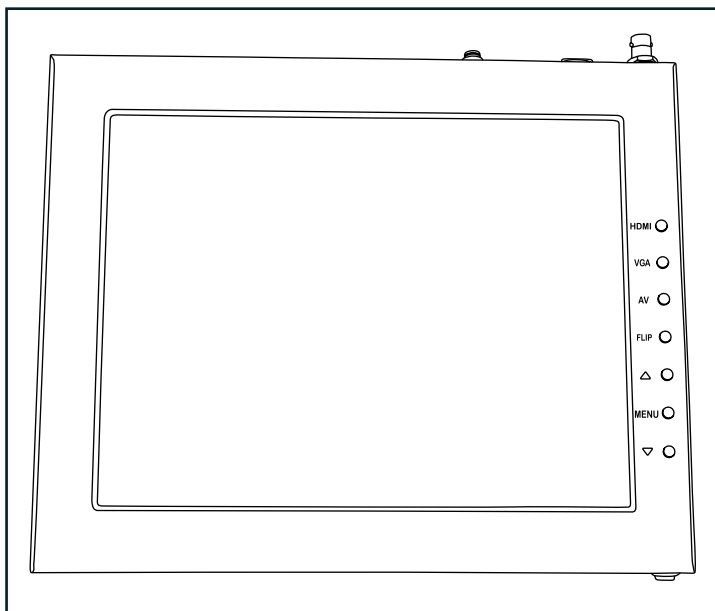

HDMI – Switch HDMI input
VGA – Switch to VGA input
SDI – Switch to composite SDI input
Flip – Toggle image flip
(Can be set to horizontal, vertical, or both via menu)
Up Arrow – Toggle up to adjust setting
Menu – Access to monitor settings
Down Arrow – Toggle down to adjust setting

Watch our VIDEO TUTORIAL on how to assemble Ikan Professional Teleprompters:

ikancorp.com/15-in-videos/



Optional Accessories

PT4500-G	Replacement Glass for both PT4500-SDI-V2
M15W	15" High Bright Widescreen Talent Monitor (for PT4500-SDI-V2)
PT15-SDI-V2	15" High Bright 4:3 Monitor (for PT4500-SDI-V2)
PT-CASE-V2	Rolling Hard Case for PT4500-SDI-V2 Teleprompter
PT-CASE-15TM	Hard Case for 15" Talent Monitor

Supported Video Signals

SDI & HDMI:

1080p @ 50, 25, 59.94, 60, 23.976, 24, 29.97, 30 Hz
1080i @ 50, 59.94, 60 Hz
720p @ 50, 59.94, 60 Hz
480p @ 59.94 Hz
576p @ 50, 59.94 Hz
576i @ 50 Hz
1920x1200 @ 60 Hz
1600 x 1200 @ 60 Hz
1400x1050 @ 60 Hz
1280x1024 @60 Hz
1280x960 @ 60 Hz
1360x768 @ 60 Hz
1280x768 @ 60 Hz
1024x768 @60 Hz
800x600 @ 60 Hz
640x480 @ 60 Hz

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations:(*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.


©2024 Ikan International. All rights reserved.



Pinout Diagram for Tally Light

Tally Light Pinout:

Tally Pin Layout Diagram

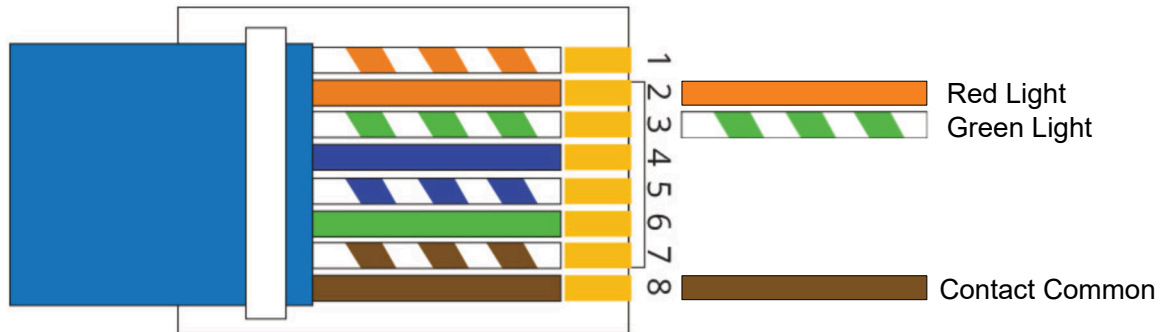

Learn More

More dynamic information at official website :www.ikancorp.com

Support

Contact email: support@ikancorp.com

©2024 Ikan International. All rights reserved.

